## Science Together



# K-Connect Capillaries, Fittings and Start-Up Kits

### AZURA® analytical K-Connect start-up kits

The AZURA® Analytical K-Connect Start-Up Kits AZF40, AZF50, AZF60 and AZF 80 contain capillaries in several lengths as well as adaptors and connectors. Material: Stainless steel.

Use the following lists for future orders and for ordering additional lengths.

Start-up kit		Included Items			
Order no.	ID		Adapters and connectors		
AZF40	0.10 mm	• 1 x 300 mm	1 Connector stainless steel		
AZF50	0.18 mm	<ul> <li>2 x 400 mm</li> <li>2 x 700 mm</li> </ul>	<ul><li>1 Connector PEEK</li><li>10 Wrench-tight fittings stainless steel</li></ul>		
AZF60	0.45 mm	• 1 x 900 mm	<ul> <li>2 Finger-tight fittings stainless steel</li> </ul>		
AZF80	0.1 mm & 0.18 mm		<ul> <li>2 Finger-tight fittings PEEK</li> <li>5 adapters for AZURA<sup>®</sup> L-devices capillary guidance</li> </ul>		

### **K-Connect capillaries**

The capillaries are color-coded according to their inner diameter (ID).

ID Color code	0.1 mm Red	0.18 mm Yellow	0.45 mm Black	
Length	Order No.	Order No.	Order No.	Recommended for connection of
150 mm	AZF41	AZF51	AZF61	Filters in the system, columns
300 mm	AZF42	AZF52	AZF62	Pump and manual injection valve, detector 1 and detector 2
400 mm	AZF43	AZF53	AZF63	Column and detector, manual injection valve and column
700 mm	AZF44	AZF54	AZF64	Autosampler and column, pump and autosam- pler (only 1 detector in between)
900 mm	AZF45	AZF55	AZF65	Pump and autosampler (2 detectors in between)

## **K-Connect fittings**

	Stainless steel long	PEEK long	Stainless steel standard
Description	Fingertight with wrench flat	Fingertight with wrench flat	Wrench flat
Order no.	A9645 (set of 2 pieces)	A9646 (set of 2 pieces)	A9647 (set of 2 pieces) A9647-1 (set of 10 pieces)







### Installation guide

#### K-Connect finger-tight fittings, stainless steel (order no. A9645)

- 1. Thread fitting onto capillary.
- Thread the stainless steel ferrule onto capillary, pointed side facing the nut.
- 3. Add the sealing ring with the flat side facing the nut.
- 4. Screw everything into thread and tighten nut finger-tight. The connection should be tight up to 700 bar. If higher pressure rating should be achieved, use a wrench to tighten the nut even further, max. 3 Nm.

#### K-Connect finger-tight fittings, PEEK (order no. A9646)

- 1. Thread fitting onto capillary.
- 2. Thread the biconical sealing ferrule onto capillary.
- 3. Screw everything into thread and tighten nut finger tight.


#### K-Connect wrench-tight fittings, stainless steel (Order no. A9647/-1)

- 1. Thread fitting onto capillary.
- 2. Thread the ferrule onto capillary, flat side facing the nut.
- 3. Screw everything into thread and tighten nut with 1/4-inch wrench with up to 5 Nm.


#### **Examples for connections of K-Connect capillaries**

Please note that detectors and flow cells with PEEK or polymer inlet should often be connected using PEEK fittings. Make sure to use the best suited fitting by reading the manual or supplement of the detector/flow cell.


For the low dispersion Kit AZF80, please use the red marked 0.1 mm ID capillaries to connect the autosampler to the column and the column to the detector. For all other connections, please use the yellow marked 0.18 mm ID capillaries.

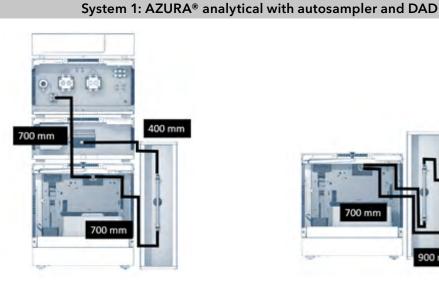


Configuration A: Devices built up as a tower

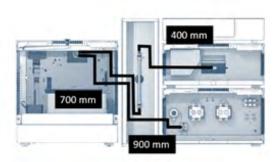

Configuration B: Devices next to each other

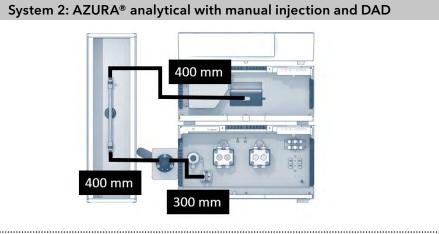

System 3: AZURA® analytical with autosampler, DAD and RI detector

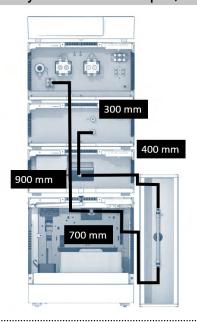

System 4: AZURA® analytical with manual injection, DAD and RI detector

