




Read the corresponding technical documentation for handling and safety reasons.

Installation




Ensure that the capillary ends are flat and even.

1. Push the capillary through the head of the nut ① .
2. Attach the ferrule ② .

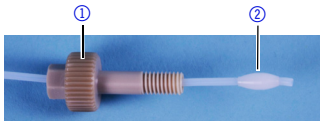

3. Fasten the capillary at the flow cell ③ fingertight.

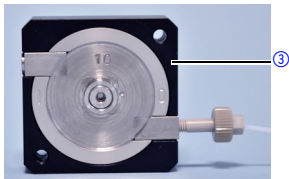

Waste Tubing Kit, V6743, Version 1.2



KNAUER

KNAUER

Wissenschaftliche Geräte GmbH

Hegauer Weg 38

14163 Berlin, Germany

Phone: +49 30 809727-0

Fax: +49 30 8015010

E-Mail: info@knauer.net

Internet: www.knauer.net